

TBL 5-3-5
Level Downlink Message Elements (LVLD)

| CPDLC Message Sets | | | Operational Definition in PANS-ATM (Doc 4444) | | |
|--|--|----------|---|--|---|
| FANS 1/A | ATN B1 | Response | Message Element Identifier | Message Element Intended Use | Format for Message Element Display |
| DM6 REQUEST <i>(altitude)</i> <i>Note – Used for a single level</i> | DM6 REQUEST <i>(level)</i> | Y | LVLD-1 | Request to fly at the specified level or vertical range. | REQUEST <i>(level)</i> |
| DM9 REQUEST CLIMB TO <i>(altitude)</i> | DM9 REQUEST CLIMB TO <i>(level)</i> | Y | LVLD-2 | Request for a climb to the specified level or vertical range. | REQUEST CLIMB TO <i>(level)</i> |
| DM10 REQUEST DESCENT TO <i>(altitude)</i> | DM10 REQUEST DESCENT TO <i>(level)</i> | Y | LVLD-3 | Request for a descent to the specified level or vertical range. | REQUEST DESCENT TO <i>(level)</i> |
| DM38 ASSIGNED LEVEL <i>(altitude)</i> <i>Note – Used for a single level</i> | DM38 ASSIGNED LEVEL <i>(level)</i> | N | LVLD-11 | Confirmation that the assigned level or vertical range is the specified level or vertical range. | ASSIGNED LEVEL <i>(level)</i> |
| DM61 DESCENDING TO <i>(altitude)</i> <i>Note – urgent alert attribute</i> | N/A | N | LVLD-14 | Report indicating descending to the specified level. | DESCENDING TO <i>(level single)</i> |