


flight procedures. Flight check aircraft fly preplanned high/low altitude flight patterns such as grids, orbits, DME arcs, and tracks, including low passes along the full length of the runway to verify NAVAID performance.


b. Pilots should be especially watchful and avoid the flight paths of any aircraft using the call sign “Flight Check.” These flights will normally receive special handling from ATC. Pilot patience and cooperation in allowing uninterrupted recordings can significantly help expedite flight inspections, minimize costly, repetitive runs, and reduce the burden on the U.S. taxpayer.

**4-3-25. Hand Signals**

*FIG 4-3-11*  
**Signalman Directs Towing**

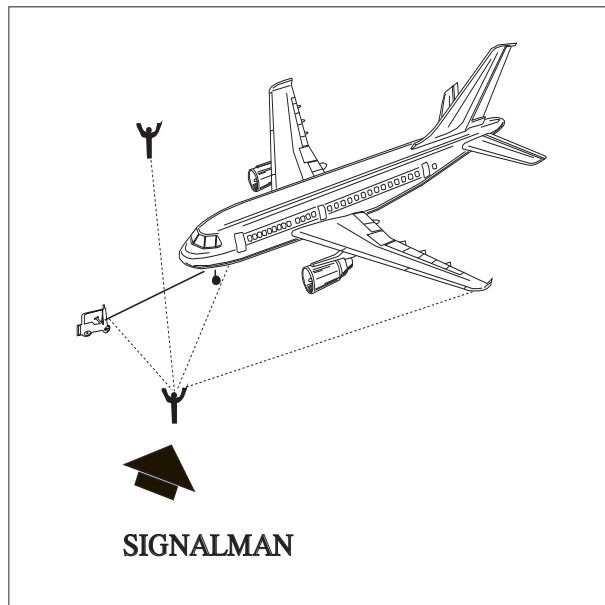

*FIG 4-3-12*  
**Signalman's Position**

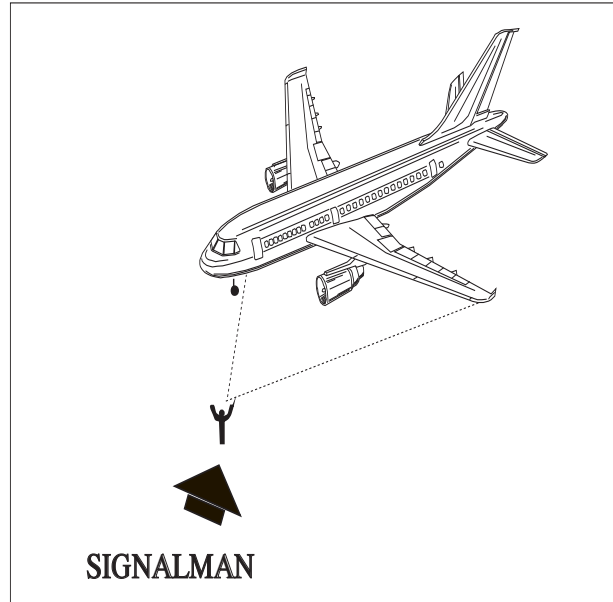

*FIG 4-3-13*  
**All Clear (O.K.)**

